




MEASURING INSTRUCTIONS

Accurate measurements are essential, for both correct pricing and proper fit. Use only a steel tape, never use cloth tape, for inside mounts, width measurements should be rounded down to the nearest 1/8 inch to prevent blind from rubbing against window casing. When ordering the width will always come first, followed by the height measurement.


Inside Mount

Measure exact width A and length B of the window opening as shown. Factory will deduct 1/2 inch off the window for clearance. On all inside mount, a small light gap may appear.

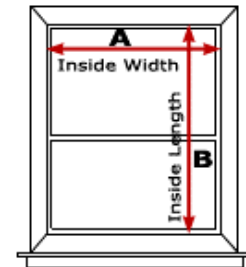

Outside Mount

Measure exact width A and length B of the window opening you wish to cover. The shade should cover the window opening by at least 2 inches in both width and height or to cover the sill C.

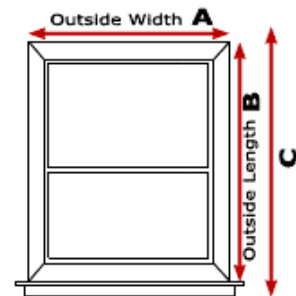

- Only use a metal tape for all measurements
- All measure must round to nearest 1/8 inch

INSTALLATION INSTRUCTIONS



1
INSTALL BRACKETS
(INSIDE MOUNT)



2
INSTALL SHADE
(INSIDE MOUNT)



3
PUT ON RETURN
(OUTSIDE MOUNT)



5
FINISH SHADE
(INSIDE MOUNT)



1
INSTALL BRACKETS
(OUTSIDE MOUNT)



2
INSTALL SHADE
(OUTSIDE MOUNT)



4
PUT ON RETURN
(OUTSIDE MOUNT)



5
FINISH SHADE
(OUTSIDE MOUNT)